



**Pyramix**  
DIGITAL AUDIO WORKSTATION

**5**

# Virtual Transport User Guide



THX DVD ES DSD DXD  
CertiFied for JVC's Lossless Audio CD's & DVD's

**MERGING**

No part of this documentation may reproduced in any form whatsoever or be stored in any data retrieval system without prior written permission of the copyright owners.

This documentation is supplied on an as-is basis. Information contained within this documentation is subject to change at any time without notice and must not be relied upon.

All company and product names are <sup>TM</sup> or Registered Trademarks ® of their respective owners. Windows XP, Windows 2000 and Windows NT are trademarks of Microsoft Corporation.

Merging Technologies makes no warranties express or implied regarding this software, its quality, performance, merchantability or fitness for a particular purpose. The software is supplied "as is" you, the purchaser, are assuming the entire risk of the results of using this Merging Technologies software.

In no circumstances will Merging Technologies, its owners, directors, officers, employees or agents be liable to you for any consequential, incidental or indirect loss or damages including loss of time, loss of business, loss of profits, loss of data or similar resulting from the use of or inability to use the Merging Technologies hardware and or software or for any defect in the hardware software or documentation.

© Copyright Merging Technologies Inc. 2005. All rights reserved



## ***User Guide : Contents***

<b>Introduction</b>	<b>6</b>
What is Virtual Transport	6
Virtual Transport design	6
Virtual Transport clients	6
<b>Server</b>	<b>7</b>
Overview	7
Main Window	7
Launcher Frame:	11
Clients Frame	12
Network Frame	17
<b>TC Player - Client</b>	<b>19</b>
Overview	19
In Use	19
<b>Sony 9-Pin Sync - Client</b>	<b>21</b>
Overview	21
In Use	21
<b>Midi Sync - Client</b>	<b>26</b>
Overview	26
In Use	26
<b>DS Video Player - Client</b>	<b>28</b>
Overview	28
DV - IEEE1394 Firewire Output	28
Launch Video Player	29
<b>TimeCode Generator - Client</b>	<b>33</b>
Overview	33
In Use	33
<b>QT Video Player - Client</b>	<b>34</b>
Overview	34
QuickTime™ Player	34
In Use	34



<b>Pyramix - Client</b>	<b>36</b>
Overview	36
In Use	36



**Virtual Transport 1.3**  
NETWORKED SYNCHRONIZATION SYSTEM

# *Virtual Transport User Guide*



## Introduction

For the latest information about Virtual Transport please consult the FAQ sections at:

<http://www.merging.com>

If you need further technical support, please e-mail

[support@merging.com](mailto:support@merging.com)

## *What is Virtual Transport*

Virtual Transport is a Client-Server architecture which allows various applications to communicate together through a common interface and to be synchronized to the same TimeCode. The applications can be running on the same machine or over the network on different computers. These processes are transparent for the user and independent of the Client applications locations.

## *Virtual Transport design*

The heart of Virtual Transport is the VT Server Application, from this, you can launch and setup Clients. The TimeCode, the play mode and the speed can also be set from VT server. All programs compatible with VT implement an interface which enables them to communicate with the main VT Server program. Each machine running VT has its own server application. The server makes the link between client applications so they can communicate together and be synchronized. The server determines whether the client is on the same machine or on a remote computer and sends commands accordingly. Servers communicate through Ethernet. A VT server can work with other VT servers through a network, or in stand alone mode, only communicating and synchronizing with local client applications.

## *Virtual Transport clients*

Currently, only a few applications using VT are available. 7 are including with Pyramix. This document describes the VT Server application along with these 7 simple Clients.

For information about how to use VT inside Pyramix, please refer to the latest Pyramix documentation.

Other applications running under VT are:

- **TC Player** is an application that shows the current TimeCode and play mode
- **Sony 9-Pin** allows a Sony 9-Pin device to communicate and be synchronized through VT with other applications
- **DS Video Player** allows video playback and video capture (Some specific hardware is required for this purpose) controlled and synchronized by VT
- **MIDI Sync** allows VT to send commands and time codes to a MIDI device
- **TimeCode Generator** allows the user to select the time clock and physical clock to which all VT Clients will be synchronized.
- **Pyramix client** ...



## Server

### Overview

When launching the Server Application, VT's icon appears in the notification area on the right side of the task bar, near the clock display. A simple left-click on it shows the main panel. A right-click on it displays a popup menu.

Show Clients	C
Hide Launcher	L
Show Network	N
<b>Hide Transport</b>	<b>T</b>
Frame Rate	►
Exit...	

Frame control pop-up

This menu allows you to either quit the server application or to show the different **Server Frames**. Only one of frame, **Launcher Frame**, **Clients Frame** or **Network Frame** can be shown at a time. When you move the **Main Panel**, these frames follow the main window. (See also main panel below)

The position of the frames and their state (hidden or shown) and some others settings described below are saved when exiting the program and reloaded when starting the Server.

The server application is divided into four parts:

- The **Main Panel** window from which the time code, the play mode and the speed are controlled.
- The **Clients Frame** from which running clients are set-up.
- The **Launcher Frame** from which clients are launched.
- The **Network Setup Frame** from which network configuration is controlled.

### Main Window



Main Window and its three panel blocks

The main window is built of 3 different panel blocks. From here all VT functions and controls can be accessed, launched, modified or moved. The complete set of Virtual Transport windows can be moved around screen together by clicking and dragging with the left mouse button in the upper display area of this main panel.

#### Main Window left-hand Panel

The first panel is the **Transport Bar** itself. At the top is a display of the current **Transport Mode** and speed as a percentage of sync play. Left-clicking and holding allows all the VT windows to be dragged anywhere on screen as a single entity.




Bottom right of the main panel the Time Code Display allows you to view and edit the current time code. Editing current time code is accessed by double-clicking in the numeric display or by pressing the **6** key on the numeric keypad.

When time code editing mode is entered, the time code field changes as shown below. The left and right arrows cursor the selection between digits in the time code edit field. Pressing the up and down arrows increases or decreases the currently selected digit. Numeric keypad or main keyboard number keys may also be used to edit time code.



Time code edit

Right clicking on the time code edit field in this mode shows a pop-up allowing you to **Undo** changes, **Cut**, **Copy**, **Paste**, **Delete** and **Select All** digits of the timecode. To exit the timecode editing mode, press the **Escape** key. To validate your changes press the **Enter** key.

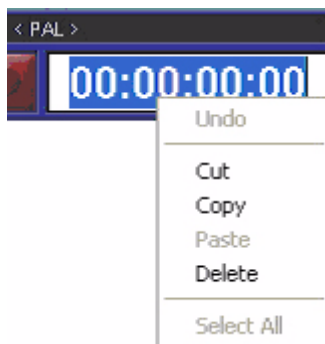

Copy pop-up

**Transport Bar button functions** together with their associated Keyboard Shortcuts: (lower left of the main panel)



Transport bar

From left to right:



- The **Rewind** button sets the Play Mode to **Rewind** mode. Pressing key number **1** of the numeric keypad has the same effect.



- The **Fast Forward** button sets the Play Mode to **Fast Forward** mode. Pressing key number **2** of the numeric keypad has the same effect.



- The **Stop** button sets the play mode to **Stop** mode. Pressing key number **0** of the numerical keypad has the same effect. Clicking twice on the **Stop** button resets the timecode





- The **Play** button sets the play mode to **Play** mode. Pressing the **Enter** key of the numeric keypad has the same effect. Clicking a second time on the Play button set the play mode to **Pause**.




- The **Pause** button sets the play mode to **Pause** mode. Pressing key number **3** of the numeric keypad has the same effect. Clicking a second time on the **Pause** button cancels the pause.



- The **Record** button sets the play mode to **Record** mode. Pressing the **.** (period) key of the numeric keypad has the same effect. Clicking a second time on the **Record** button exits record mode.

### Context Menu

Right clicking anywhere on the **Main Window** opens the main popup menu. Right-clicking on the Task Bar icon has the same effect. From here the following actions can be initiated:

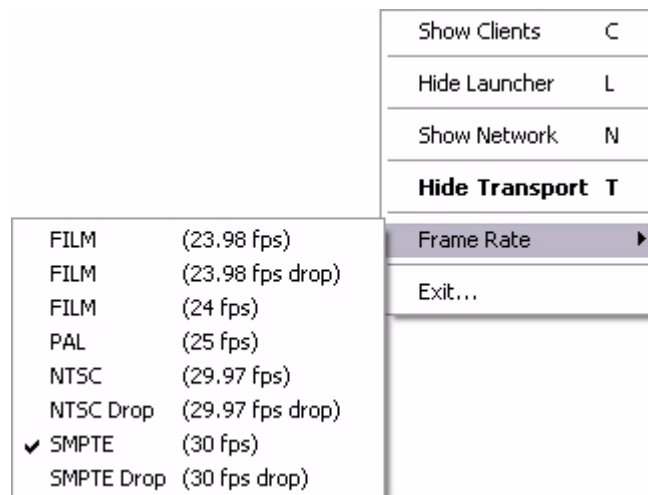

Frame Rate set sub-menu pop-up

The functions toggle between **Show** and **Hide** E.g. if the **Launcher Frame** is already visible, the menu will offer **Hide Launcher**.

- **Show Clients** displays the Clients Frame.
- **Show Launcher** displays the launcher view.
- **Show Network** displays the network view.
- **Hide Transport** hides the Virtual Transport main window.
- **Select Frame Rate**, leads to the sub-menu as seen in Fig. 5.
- **Exit** exits Virtual Transport.



## Main Window center Panel

The Center Panel gives quick access to the different **Frame** views.



- The first button (**CL**) opens the **Client Frame**.
- The second button (**La**) opens the **Launcher Frame**.
- The third button (**Net**) opens the **Network Frame**

## Main Window right-hand Panel

The Right-hand block Hides or Shows Advance mode, the **Varispeed Frame** and **about VT** window.



- The **X** button hides all the VT server windows. (Keyboard Shortcut **T**).
- The **A** button activates advance mode and displays the **Advance Mode and Varispeed** setup frame. (Keyboard **A**)
- The **?** button accesses the **About Virtual Transport** panel. (Keyboard **F1**). The **About...** panel can be hidden with the **Esc** or **Enter** keys.

## Advance mode & Varispeed set-up frame.




Varispeed & advance mode

**Advance** mode & **Varispeed** set-up frame allows editing of the Varispeed setting by double-clicking on the number field. This field works in the same way as the timecode editing field, except that the up and down keyboard keys are used to move in the field instead of changing the digits of the speed. The right play button of the Varispeed setup frame sets the play mode to Forward playing and the left play button sets the play mode to Reverse play.

When the Varispeed setup frame is shown the **A** button is highlighted. Clicking again on the **A** button hides the frame.

The right drop down menu gives access to the timecode frame-rate selection, as shown in Fig. 8 below.

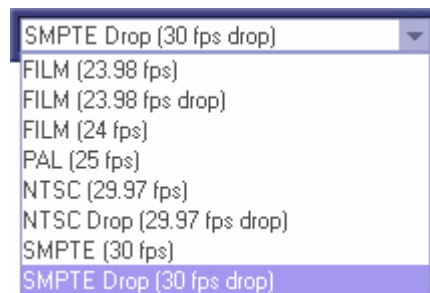

Advance mode & Varispeed set frame rate

## Launcher Frame:

The **Launcher Frame** allows you to start a client application on the local computer (in a future release it will also be possible to start a client on a remote computer). All available VT client applications are displayed in this frame. For each client application, the following details are given:

- The name of the application,
- A short description of the application,
- The name of the developing company
- The name of the machine on which the application will be launched.



Launcher Frame

To start an application, simply double click on it or click the right mouse button and select **Launch** in the popup menu. Shown above is the **Launcher Frame** with the current **VT Client** applications available from **Merging Technologies**. Other applications will be available in the future, from Merging Technologies and third-party companies. When network is activated and more than one machine is running VT, you can select the computer on which to launch the clients by right clicking on the Launcher frame and selecting the desired machine in the popup menu.



Launcher pop-up menu



## Clients Frame

The **Clients Frame** shows all VT clients currently running on the local computer and allows them to be set-up. In a future release it will be possible to setup remote clients running on a remote computer..

The screenshot displays the 'Clients Frame' interface, which lists three active clients. Each client panel includes a header with an icon, ID, instance number, name, and a timestamp. Below the header is a description and a set of controls for synchronization and playback.

- Pyramix** (ID: 01, Inst: 01): Description: Pyramix Virtual Studio - Digital Audio Workstation on VCUBE. Controls include Offset (+00:00:00:00), Delta (+00:00:00:00:00), Mark In (+00:32:39:22), Mark Out (+00:37:21:21), Clock Master, TC Master, Lock, Store Offset, Speed (0.00 %), fps (25.00), Chase, Loop, and a STOP button. It also features a Record On button and an Audio Track Arming section with 30 slots.
- Sony 9-Pin Sync** (ID: 02, Inst: 01): Description: Sony 9-Pin Sync / RS-422 Communication on VCUBE. Controls include Offset (+00:00:00:00), Delta (+00:32:39:22:00), Mark In (+00:00:00:00), Mark Out (+00:00:00:00), Clock Master, TC Master, Lock, Store Offset, Speed (0.00 %), fps (25.00), Chase, Loop, and a STOP button. It also features a Record On button and an Audio Track Arming section with 4 slots.
- DS Video Player** (ID: 03, Inst: 01): Description: DirectShow Video Player on VCUBE. Controls include Offset (+00:00:00:00), Delta (+00:32:39:22:00), Mark In (+00:00:00:00), Mark Out (+00:00:00:00), Clock Master, TC Master, Lock, Store Offset, Speed (0.00 %), fps (25.00), Chase, Loop, and a STOP button. It also features a Record On button and a Video Track Arming section with 1 slot.

Clients Frame



When there are too many clients to be simultaneously displayed in the Clients frame, a scroll bar appears on the right-hand side.

For each active client, a number of information fields are available. Described from left to right and top to bottom, screen block by screen block:


### Client frame upper block



Client Frame upper block

- The **ID** number of the client application. Each client running on the same machine has a unique ID.
- The **Instance** number. If an application has more than one instance running, each instance has a different Instance number.
- Name of the application.
- Name of the developing company.
- The current time code of the client. The client time code could be different to the server time code depending on the **Offset** set on the client and others delays.
- A short description of the application.
- The name of the machine on which the client is running.
- A **wrench** key opens the client's settings, when applicable
- A **blue magnifying glass** shows the client's interface
- A **red magnifying glass** hides the client's interface
- A **X** (cross) closes the client

### Client frame middle block

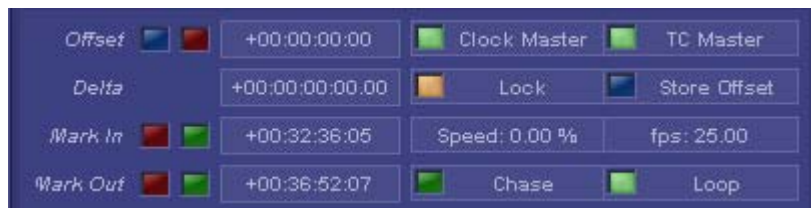


Client Frame middle block

- **Blue Offset** button. Works by a) scrolling the client to the desired location, b) pressing **Offset** button, c) locating the TC master application to the reference position, d) pressing **Offset** again. The applications are now locked with their new offset positions.
- **Red Offset** button. Resets the offset setting to zero.
- **Offset time display**. This field could be edited by clicking on it, in the same way the timecode field works in the main panel.
- **Clock Master** button. Indicates if an application is Clock Master. Also allows activation of an application as clock master. **There can be only one Clock Master per computer.**
- **TC Master** button. Indicates if an application is TC Master. Also allows selection of the clock master application. **There can be only one TC Master on a computer**
- **Delta** (time difference) display between the Client and the local Server.



- **Lock** button. Indicates if a client is locked and allows locking or un-locking the client.
- **Store Offset**. This button is provided as an extra facility for setting-up offsets between TC masters and clients. It works by a) unlocking the client b) locate the client and local server to their respective desired locations c) press **Store Offset** d) press **Lock**. The applications are now locked with their new offset positions.
- **Mark In red** button. Sets the Mark In to the current cursor time location.
- **Mark In green** button. Locate to the current Mark In time
- **Mark In number field**. Indicates the current Mark In time. This field can be edited by clicking on it, in the same way the timecode field works in the main panel.
- **Speed number field** indicates the speed at which the client time code is incremented, in % of the rate.
- The rate in frame per seconds (**fps**).
- **Mark Out red** button. Sets the Mark In with the current cursor time location.
- **Mark Out green** button. Locate to the current Mark In time
- **Mark Out number field**. Indicates the current Mark Out time. This field can be edited by clicking on it, in the same way the timecode field works in the main panel.
- **Chase** mode button. Indicates if the Client is in chase mode.
- **Loop** mode button. Indicates if the Client is in loop mode.

## Client frame lower block

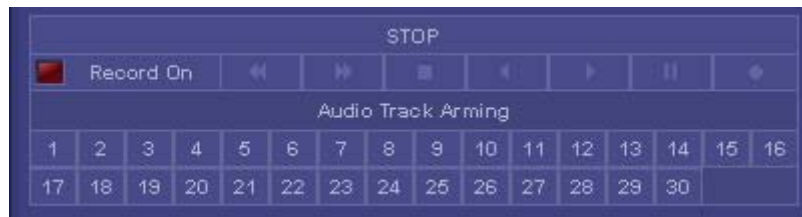

Client Frame lower block

- The current play mode of the client. On the Fig. 13, the client is in **STOP** mode.
- **Record On** button. If the client has capture or record features you can arm it from here
- **Audio Track Arming**. If the target Client has remote track arming features, you can arm the desired tracks for record from here.

The Client's transport control keys are grayed out when the client is in **lock mode** but continue to indicate transport status. When in local mode (**lock** not lit) these buttons function as 'local' controls for the client.





## Other Clients Frame options

By double-clicking on the client information bar, you can collapse the client information frame. When collapsed, only the ID, the Instance number, the name, the company and the client time code are shown.



Clients Frame with collapsed clients

When a client information frame is right-clicked, a popup menu appears. This menu allows you to **Show** or **Hide** the Client in the Windows environment, **Close** the Client application or **Kill** it when the application is not responding.



Client pop-up menu

The Server does a poll on each Client. If a Client doesn't respond during a certain time, this Client appears in **red** in the Clients Frame with the text "**Not Responding**" in place of the company name.

This is shown in Figure 16. By right-clicking on the client not responding, you can kill it by selecting **kill** in the pop-up menu.




The application can also be closed with click on the right mouse button and selecting **Close** in the popup menu.



Client not responding display

When more than one machine is running VT and the network is activated, you can select the computer on which you want to view the running clients by right-clicking on the **Clients Frame** and selecting the desired machine in the pop-up menu.

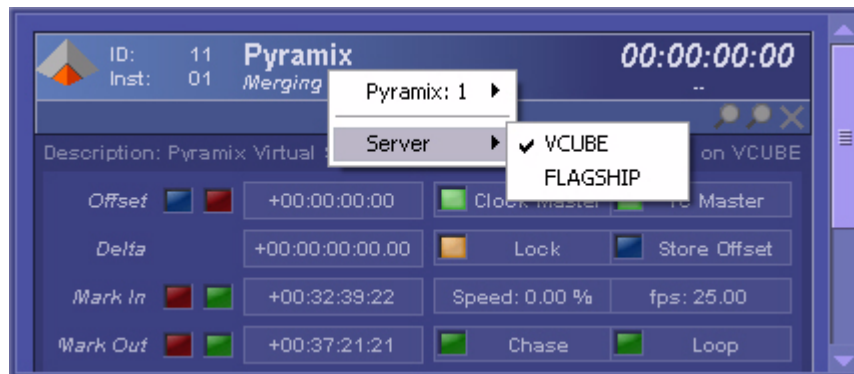

Client frame pop-up menu





## Network Frame



Network Frame with active clusters

The **Network Setup Frame** allows you to configure how VT Servers running on machines on the local network will interact. They can be setup to run in stand-alone mode by disabling the network. This is the default configuration.

When working together with the other VT Servers on the local network, you can configure each server to be a TC Master, a Slave or as an available Server. This is achieved by sliding machines between Available Server Window on the right side, to Network Clusters Window on the left. Dragging a server into another one will create a cluster, where the “container” server will act as TC Master and the contained Server will be slave. A TC Master Server can have many Slaves, but a Slave can have only one Master. An Available Server acts like a Server without the network enabled. As seen in Fig. 18, more than one cluster can be created.

When a change of Play Mode or Speed is made on a Client or a Server of the Cluster, all Clients and Servers in this Cluster are affected by this change. Servers and Clients outside the Cluster are not affected by the changes.

The settings current before the application is quit are saved and restored the next time you launch the program.


At the bottom of the frame, on the left-hand side, a check box allows the network to be activated. When this check box is disabled, the Server runs in stand alone mode and communicates only with the Clients on the local machine.

At the bottom of the frame, on the right-hand side, there is a combo box that allows the user to choose an IP address on a computer with multiple IP addresses. If the machine has only one IP address, this



address is selected by default and no other choice is available. This address is used only when the network is enabled. If you change the IP address while the network is enabled, this will disable the network for a short time and enable it again. This will cause the loss of the current network configuration.

The state of the network (enabled or disabled) and the IP address of the computer are saved on exit and restored on start-up.

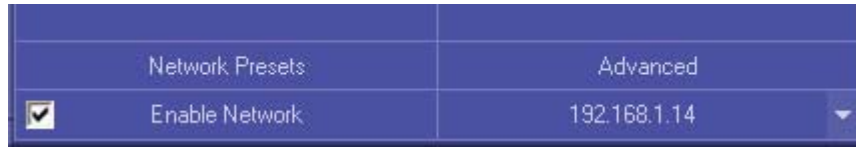

Network settings and information boxes

Above the Enable Network box, there is a **Network Presets** button. This button calls the **Network Configuration Preset** window.



Preset Configuration dialog


At the top, a multi-choice combo box displays the current **preset name**. If the preset list is not empty you can click at the right to expand it and select a desired preset. After an existing preset has been selected, clicking on the **Load** button activates it.

Creating a new preset is done by clicking on the **New Config** button. This opens a new window where a name can be set for the new preset. Choices have to be confirmed or cancelled. If confirmed, the new preset is added to the preset list and the name is displayed.

When editing an existing preset, clicking the **Store** button will save the latest changes. Clicking on the **Suppress** button (Protected by an “are you sure?” dialog) will suppress the current loaded preset. Clicking on the **Close** button will close the network configuration window.

The **Network Presets** button is deactivated when the network is disabled.

Above the IP Address box is an **Advanced** button. This button calls the **Advanced Network Configuration** window.

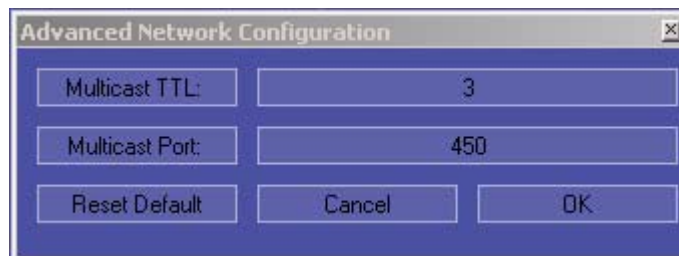

Advanced Network Configuration dialog

The **Advanced Network Setup Frame** enables you to choose the TTL value of the multicast messages used to find every **VT Server** running on the network. The **TTL Multicast** setting determines the number of routers/switches **VT** can “jump” or **Hop** when broadcasting its “invitation” to connect with other on-line **VT** servers. Typically each router **VT**'s broadcast request passes through can represent a **Hop** or more. The default setting is 3 and this is sufficient for a small network. In some situations though, it



may be desirable to increase it (For example when **VT** machines are separated by several routers or switchers in a big network)

The **Multicast Port** can also be set. This allows you to set this **VT Server** to work without seeing another **VT Server** using a different multicast port.



## TC Player - Client

### Overview



VT TC Player Client Frame

Fig. 1 VT TC Player Client Frame

TC Player is a simple application that can show the current Time Clock and Play Mode received from the VT Server running on the local machine. Apart from the regular client frame and controls, this application uses a floating panel launched by clicking in the blue magnifying glass of its client window. This will show the current time code, a transport display, a speed display and the play mode that the user can choose to display in one of three different time code formats:

- Frame format shows the time code in hours, minutes, seconds and frame number
- Sample format shows the time code in hours, minutes, seconds and sample number
- Milliseconds format shows the time code in milliseconds.



TC Player floating panel, with Transport display


### In Use

Once launched, the floating panel gives access to several options. Right-clicking on the panel brings up a popup menu. From there the following settings can be made:

- The Frame can be set to **Opaque** or transparent at three different **AlphaBlend** levels: 75%, 50% or 25%. Numeric keys 1 to 4 are shortcuts for the graphic options.
- Check **Flick Free** if flicker becomes objectionable.
- Timecode format can be set to Frames, Samples, Milliseconds as described above
- View of the play mode can be toggled between graphics and text. This can also be done with the **T** key for graphical representation and the **Y** key for textual.
- Speed display in % can be toggled **ON** and **OFF**
- Transport display can be toggled **ON** and **OFF**



- The application can be closed by a click on the right mouse button and selecting **Close** in the popup menu. Shortcut key **Q** may also be used.
- All these settings are saved when the application is closed and restored at next launch.

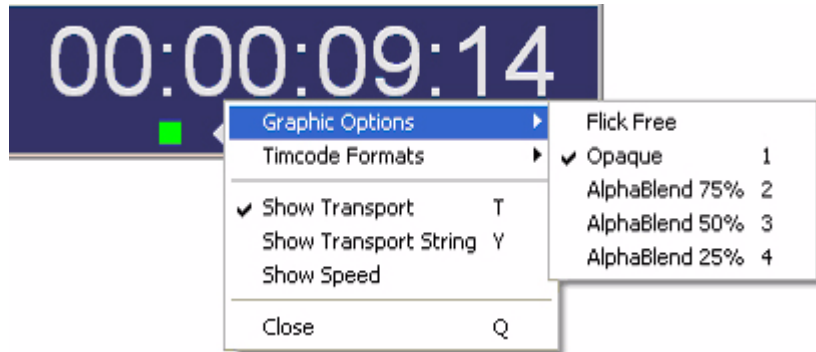

TC Player pop-up



## Sony 9-Pin Sync - Client

### Overview

The Sony 9-Pin application is a client application that allows VT Clients to communicate and be synchronized with a Sony 9-Pin device connected to the computer with an RS-232 / 422 interface.


**Note:** The 9-pin driver in Virtual Transport is only intended for use with VT clients requiring 9-pin control. At present this means only the VT Video Player when used STAND ALONE.

### In Use

To launch a new **Sony 9-Pin Client**, go to launch frame (**La**) in the VT Server and click on Sony 9-Pin Sync. This will open a regular VT client in the Client Frame.

Two different modes can be activated in the settings panel, accessed with the wrench key tool or by right-clicking in **Sony 9-Pin Sync** upper window and choosing settings in the pop-up menu.

When green checkbox **Controller To VT** (slave) is activated

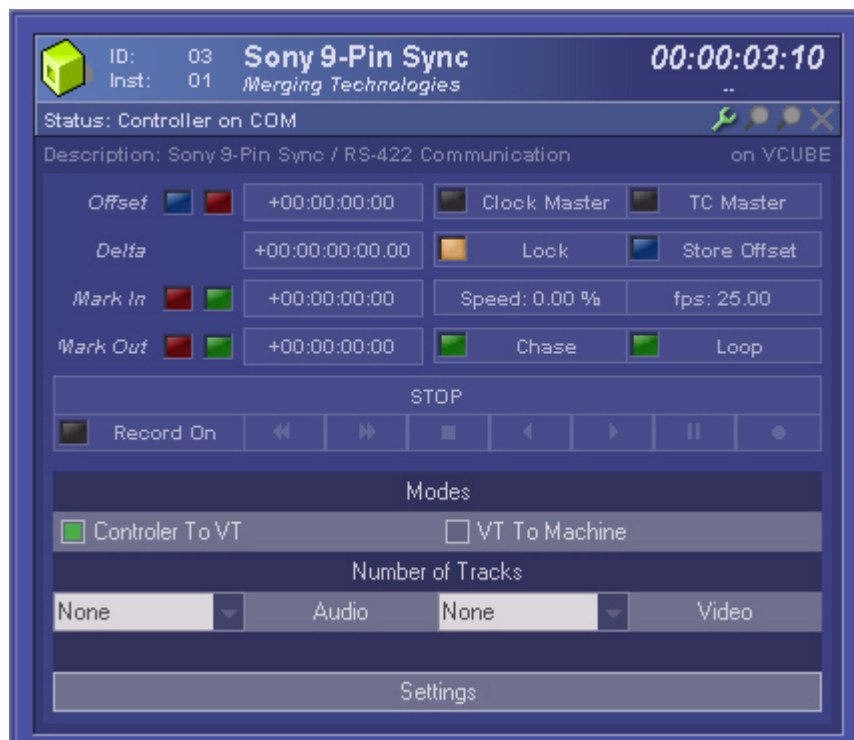


Sony 9-Pin Sync client in Controller to VT (master) mode


- VT is slaved to an external controller.



- The **Settings** button will show the Sony 9-Pin Configuration panel. As shown, different system types can be chosen from the first drop-down menu. The external machine will “see” VT as the machine chosen here. Other settings available here are necessary Sony 9-Pin protocol choices regarding the jog wheel behavior, the track arming mapping, Edit On/Off delay and serial port selection. As seen below.

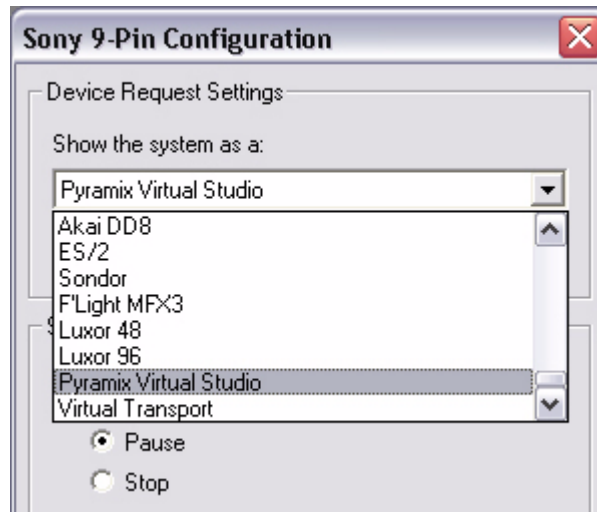

System type, drop-down menu

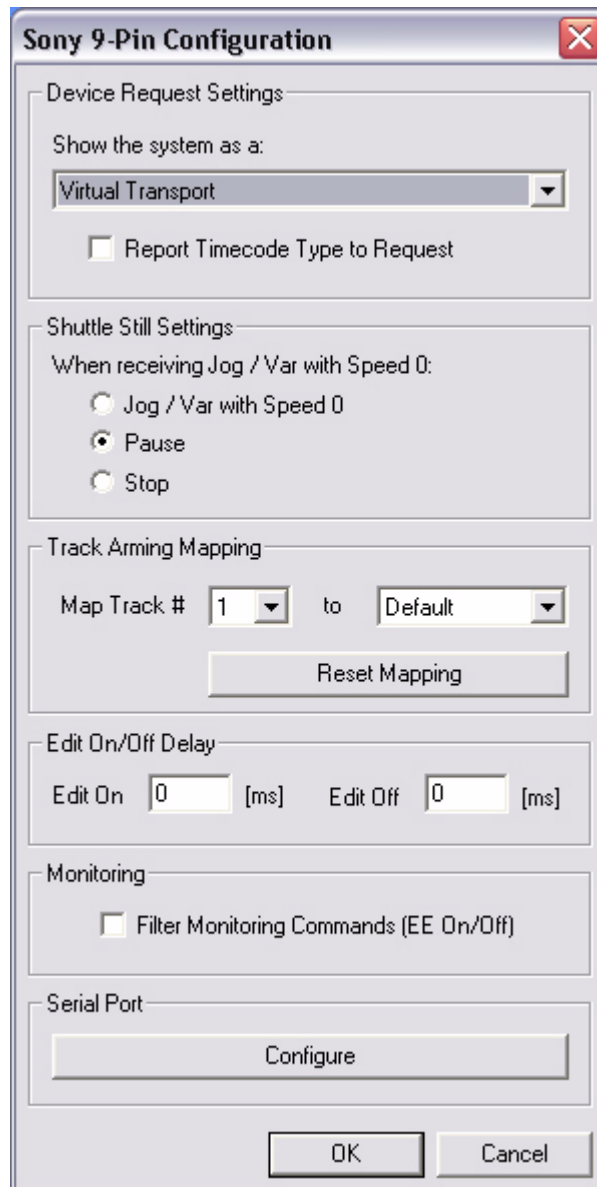

Sony 9-Pin configuration in slave mode

**Note:** on **Monitor Command Filtering**, as seen above. Monitoring commands sent by the controller can be filtered (**Full EE Off**, **Full EE On** and **Select EE On**) and therefore leave Pyramix to manage monitoring automatically. This can be required when recording in Auto-Monitoring (both US or European model) to avoid the controller switching this mode **Off**. Choose the machine in the **Settings > General Settings : Controllers** page, click **Properties**. This opens the **Controller Properties** window. Again, click the **Properties** button which opens the **Sony 9-Pin controllers Settings** window. Check the **Filter Monitoring Commands (EE On/Off)** button.

### Serial Port Configure

Opens a dialog to choose the Com Port that will be used for 9-pin communication.





When green checkbox **VT to Machine** (master) is activated



Sony 9-Pin Sync client in VT to Machine (master) mode


- VT controls an external machine.
- From the left drop-down menu, the number of audio tracks that will be available for track arming in the upper panel can be selected.
- From the right drop-down menu, video track that will be available for track arming in the upper panel can be selected.



- The **Settings** button will show the **Sony 9-Pin Protocol Configuration** window, where incoming **TimeCode** types can be selected and **Com Port** chosen by clicking on the **Configure** button. As seen below.



Sony 9-Pin Protocol configuration window

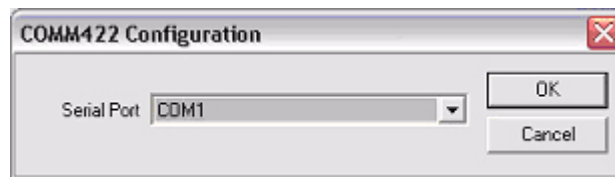

Comm422 configuration window



## Midi Sync - Client

### Overview

Midi Sync is a client application that allows Virtual Transport to send and receive MIDI Time Code and MIDI Clock to and from MIDI devices.

These MIDI devices can be external to the Midi Sync host computer, connected thru a regular MIDI interface. They can also be other software applications running internally in the same computer as MIDI Sync. For this purpose A “virtual hardware” midi device such as MidiYoke will serve as MIDI link between Midi Sync and the Client application, emulating the behavior of a real MIDI interface.

Several third party applications such as sequencers, stand-alone virtual instruments and loop players can be synchronized with Virtual Transport’s clients using Midi Sync. A client application could be used as Time Code Master for VT, when synchronized with Midi Sync.

**Note:** please note that although synchronized with VT, third party audio applications running on the same computer will need their own audio I/O interface and will not have access to Pyramix audio hardware.



## In Use

To launch a new **Midi Sync** client, go to launch frame (**La**) in the **VT Server** and click on **Midi Sync**. This will open a regular VT client in the Client Frame.



Midi Sync panel with settings opened

## Settings

The settings, specific to **Midi Sync**'s client panel, are the **Midi Input** menu, which enables a Midi Input device to be selected, **Midi Output**, which selects a Midi target device. The **Frame Rate** menu provides a choice of 24, 25 30 and 30drop frame rates and is only active when **Midi as TCMaster**, lower in panel, has been activated.

The **Midi In as TCMaster** checkbox allows for a Midi device to act as the timecode master for VT and all other clients connected to the same cluster.

**Generate MTC** will make Midi Sync output Midi Time Code to the selected Midi output and likewise **Generate MidiClock** will send Midi clock information to selected output. Midi Time Code information is expressed in Hours, Minutes Seconds and Frames. Midi Clock expresses timing information in musical numbers such as beats, bars and bar number.

**Midi Input** display will show the time of an incoming Midi clock, **VT server** display will show the reference time of the VT server and **Midi Output** display shows the outgoing Midi time. **MTC In**, **MTC Out** and **Midi Clock Out** red buttons give the user extra feedback on Midi Sync activity




## DS Video Player - Client

### Overview

The DS Video Player application can play back video files of almost any format. When IEEE1394/Firewire is available on the computer, DS Video Player can import and export DV movies from and to DV devices, such as DV camcorders, DV VCRs, etc.

This application consists of a single frame displaying the movie. Every operation is done in the popup menu obtained by a right mouse click on the frame. This pop-up menu changes contextually depending whether a video file is open or not. Some controls are only available when required hardware is connected.

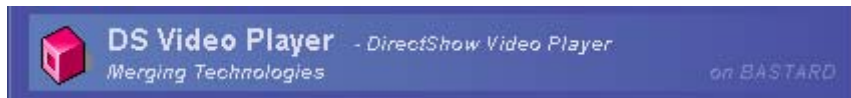

DS Video Player Client

### DV - IEEE1394 Firewire Output

**Note:** Video output via the Firewire port only supports DV25 format files.


If you want to use a graphics card with a video output, to accommodate other video formats e.g. MPEG1, you will need to use a card which is capable of copying the video overlay onto the video output. This function is known by different names depending on the manufacturer.

**Example:** For cards based on ATI Radeon chipsets having this capability it is known as **Theatre Mode**



## Launch Video Player

To launch a new video Player, go to launch frame (**La**) in the VT Server and click on **DS Video Player**. This will open a black frame; this is the main frame of DS Video Player.

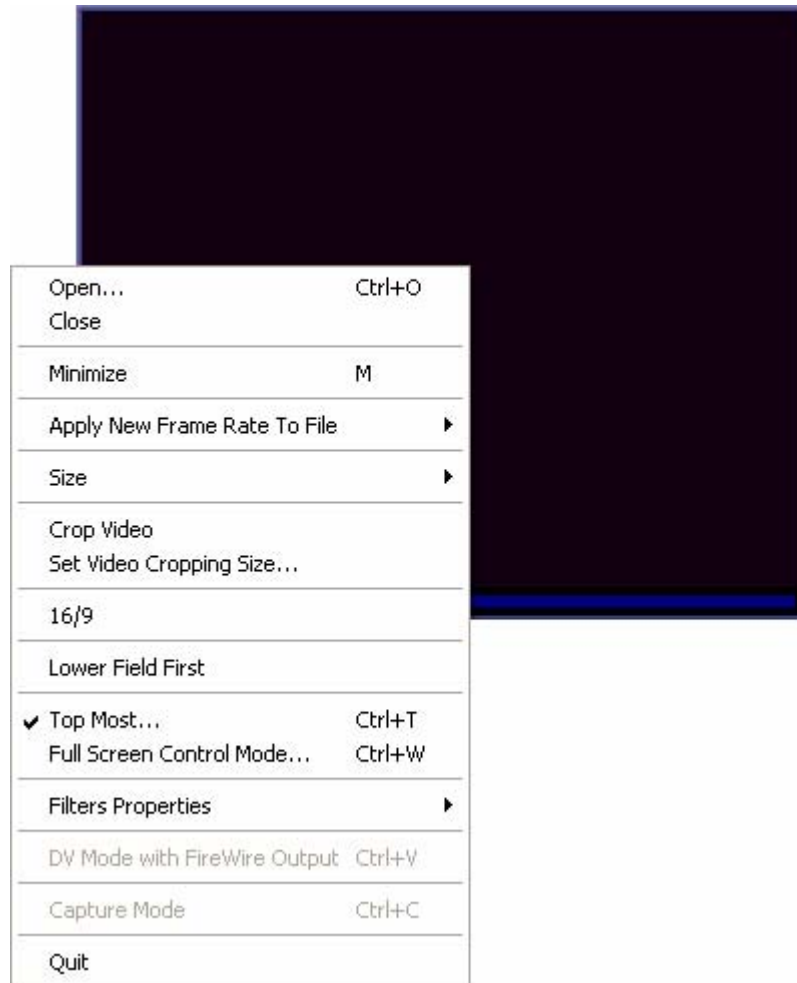

Video Frame with context pop-up menu


## General controls

Right-clicking in the video frame will open the pop-up menu. From there the following settings can be made:

- **Open** Opens a video file, or use the shortcut **ctrl-O**.
- **Close** Closes a video file.
- **Minimize** Minimizes the window, or use the shortcut **M**.
- Apply a new frame rate to the video file using the command **Apply New Frame Rate to File**. Frame rates can be:
  - 12.00 fps
  - 12.50 fps
  - 14.98 fps
  - 15.00 fps
  - 24.00 fps
  - 25.00 fps



- 29.97 fps
  - 30.00 fps
  - 48.00 fps
  - 50.00 fps
  - 59.94 fps
  - 60.00 fps
- **Crop Video** Opens the **Set Video Cropping Size** window as shown here:

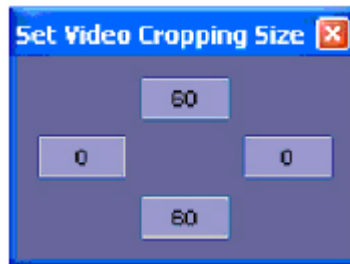

Video cropping dialog

Type numbers in the boxes to reduce the edge of the picture by the specified amount.

- **16/9** Toggles the video format between 4/3 and 16/9.
- **Lower Field First.** This has been made available to compensate for some field gaps under certain circumstances, in Native mode only. The read order of video field depends of the video format: Lower field is first in: DV – PAL & NTSC and D1 – 4.2.2 NTSC. Upper field is first in D1 - 4.2.2 PAL. This allows, for example, for a DV PAL file to play in sync with a D1 Pal, compensating for the 1 field gap.
- **Top Most...** Sets the window to top most window or use the shortcut **Ctrl-T**.
- To enable the video output on a IEEE1394/Firewire device: make sure a Firewire device is plugged in and select the **DV Mode with FireWire Output** command or use the shortcut **Ctrl-V**. This option is grayed out when no Firewire device is available.
- To enable video capture a video device should be installed on the computer and **Capture Mode** activated in the pop-up menu or with the shortcut Ctrl-C. This option is grayed out when no device is available.
- **Full Screen Control Mode...** Sets the video frame can be set to full screen with Play Mode display or use the shortcut **Ctrl-W**.

### Controls available only when a video file is opened:

- **Filters Properties.** With this command the following choices can be made in the sub-menu: **Video Render**, **DV Video Decoder**, **DV Splitter**, **AVI Splitter**, etc. Depending on the file type or video device in capture mode.
- Size of the frame can be adjusted to a quarter, a half, three quarters, normal, double size or full screen. This is achieved using the controls in the submenu **Size**. The following shortcut keys may also be used:
  - **Q** for Quarter
  - **H** for Half
  - **T** for Three quarter
  - **N** for Normal
  - **D** for Double
  - **F** for Full screen



## Full screen mode

- At the bottom of the frame, a transport bar equivalent to the one in the main VT window is available, with timecode display on the right. This works just like the VT timecode edit.
- If the **Escape** key is pressed in full screen mode, most of the popup functions will be displayed on the left side of the frame.




DS Video Player in full screen with control mode

## Capture Mode


Right-clicking in the DS video frame will open the **DS Video Player** pop-up menu. In **Capture Mode**, new items will be available related to video capture settings, as show below in Figs 5 and 6. Please note that the capture mode can only be activated if you have a video device connected to your system.

Only video signals can be recorded in DS Video Player, sound will need to be routed to Pyramix Virtual Studio hardware inputs and recorded separately. It can also simultaneously be copied to tape by syncing Pyramix in VT with a Pyramix client, along with DS Video Player.

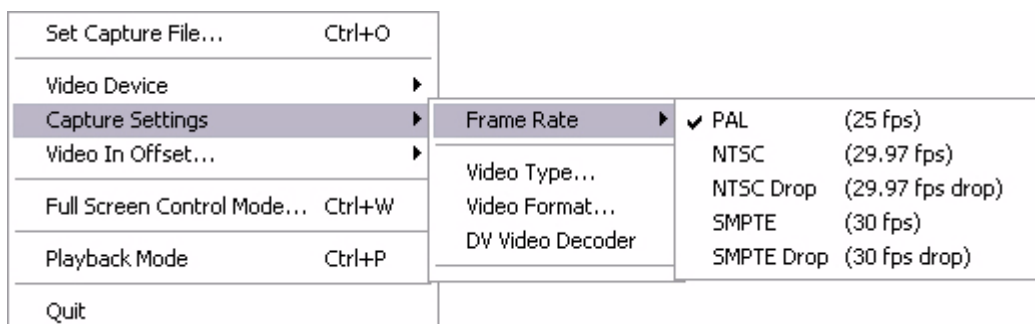

Pop-up menu and sub-menus for video capture settings



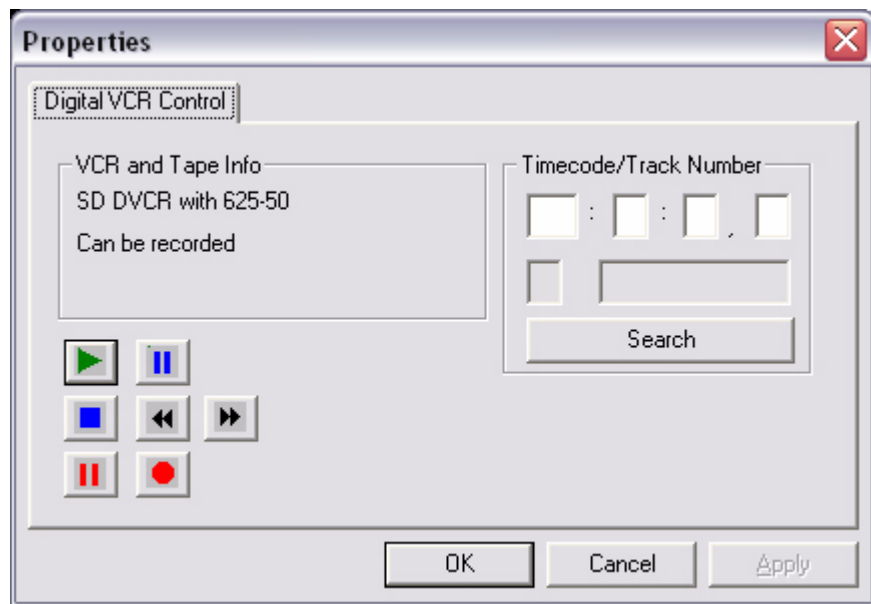

Video Type dialog



## TimeCode Generator - Client

### Overview

TC Generator is an application providing all necessary tools for synchronizing VT to and from any external equipment capable of delivering timing information. **Please note** that **TimeCode Generator** needs an internal access to a Mykerinos board in order to communicate with the outside world. The Time Code I/O of the card will need to be available for TC Gen and it will need to be installed without any other card attached to it by HDTDM.

TC Gen can work either in **Generator Mode**, providing timecode to external devices or in **Synchronizer Mode**, chasing incoming timecode and forwarding it to VT. As TimeCode Generator is designed to substitute for Pyramix time synchronization tasks in certain situations, it is only desirable to have one of the two applications running at the same time on the same computer.

### In Use

TimeCode Generator is identical to the TimeCode module in Pyramix. For further information about specific settings, please refer to Pyramix General Settings Time Code chapter in the **Pyramix User Manual**.

TimeCode Generator / Synchronizer client




## QT Video Player - Client

### Overview

The QT Video Player application is a QuickTime™ Player, capable of playing back video files in every format recognized by QuickTime™.

This application consists of a single frame displaying the movie. Every operation is done in the popup menu obtained by a right mouse click on the frame. This pop-up menu changes contextually depending whether a video file is open or not. Some controls are only available when required hardware is connected.

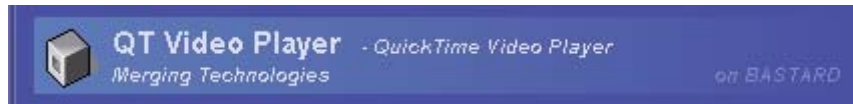

QT Video Player Client


### QuickTime™ Player

Before the QT Video Player client can be used, QuickTime™ Player version 6.0 or higher must be installed on the PC. The application may be downloaded from:

<http://www.apple.com/quicktime/download/>

### In Use

To launch a new **QT Video Player**, go to launch frame (**La**) in the VT Server and click on **QT Video Player**. This will open a black frame; this is the main frame of QT Video Player.

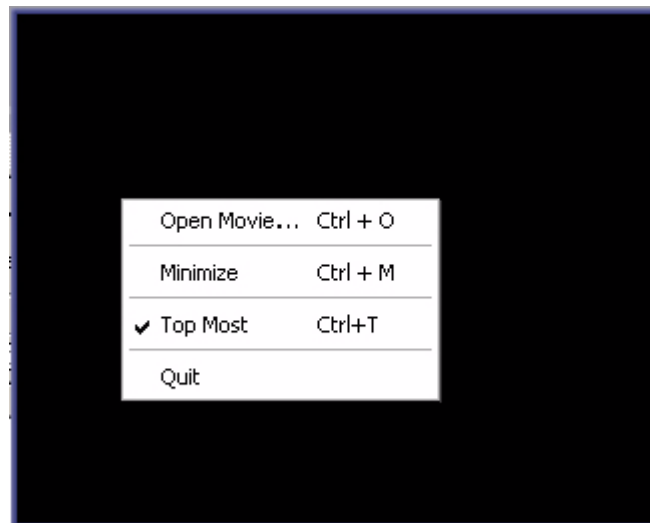

QT Video Player Video Frame with context pop-up menu

### General controls

Right-clicking in the video frame will open the pop-up menu. From there the following settings can be made:


- **Open Movie** Opens a video file, or use the shortcut **ctrl - O**.
- **Minimize** Minimizes the window, or use the shortcut **ctrl - M**.
- **Top Most** Keeps the QT Video Frame on top of other windows or use the shortcut **ctrl - T**



- **Quit** Closes the QT Video Frame.

Once a video file has been opened, further menu options become available. The availability of certain options is dependent on the type of video file.

Below, a widescreen (2.43:1) video file, has been loaded

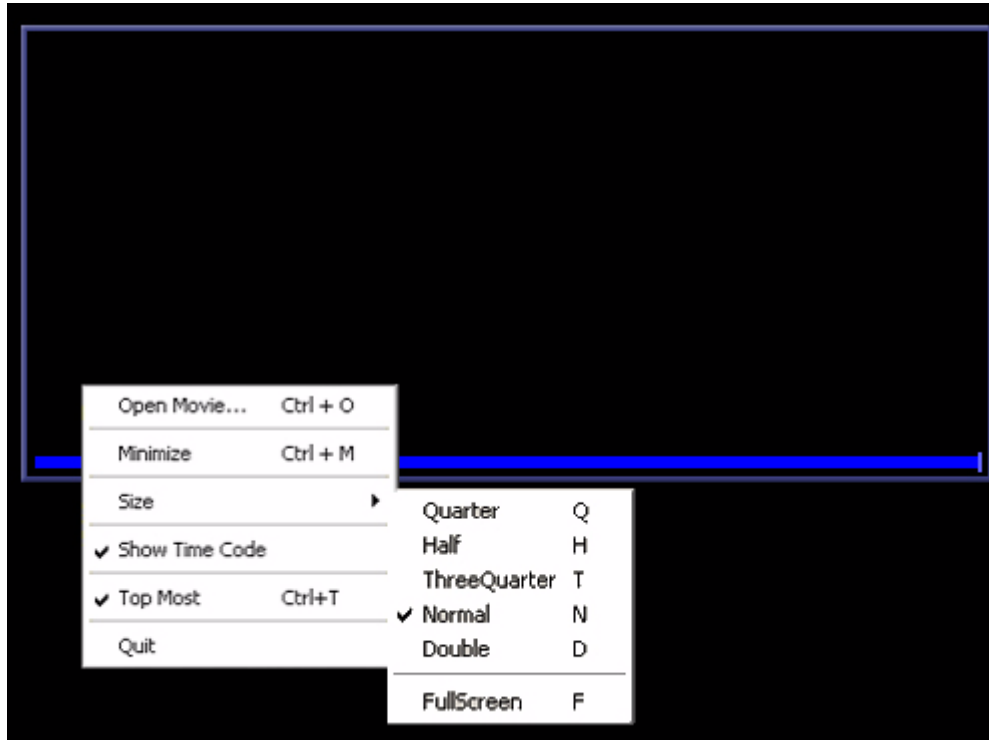

QT Video Player Video Frame with context pop-up menu

### Controls available only when a video file is opened:

Size of the frame can be adjusted to a quarter, a half, three quarters, normal, double size or full screen. This is achieved using the controls in the submenu **Size**. The following shortcut keys may also be used:

- **Q** for Quarter
- **H** for Half
- **T** for Three quarter
- **N** for Normal
- **D** for Double
- **F** for Full screen

Some QuickTime™ files contain a Time Code track. Where a Time Code track is present, it can be shown or hidden with the menu command

- **Show Time Code** that appears below the **Size** menu entry.



## Pyramix - Client

### Overview

Pyramix Client is an application allowing simple remote communication and synchronization with Pyramix Virtual Studio.




Pyramix Client Frame

### In Use

Apart from providing all the transport settings common to VT clients, the Pyramix client offers **Track Arming** commands reflecting the number of tracks currently available in the Pyramix edit window. It is also possible to set Pyramix into Record Mode in the Client frame.

Typically Pyramix should act as the Clock Master and TC Master and this can be set either here in the Client frame or in the Pyramix Application in the **Settings > All Settings > Remote Control > Virtual Transport** page tick the boxes: **Automatically set as Clock Master** and **Automatically set as Time Code Master**.

The same dialog will enable Virtual Transport Communication with Pyramix to be fine tuned as desired. For any further information about setting up Pyramix to communicate with VT, please refer to **Pyramix User Manual** in the **Settings** Chapter, Virtual Transport section.

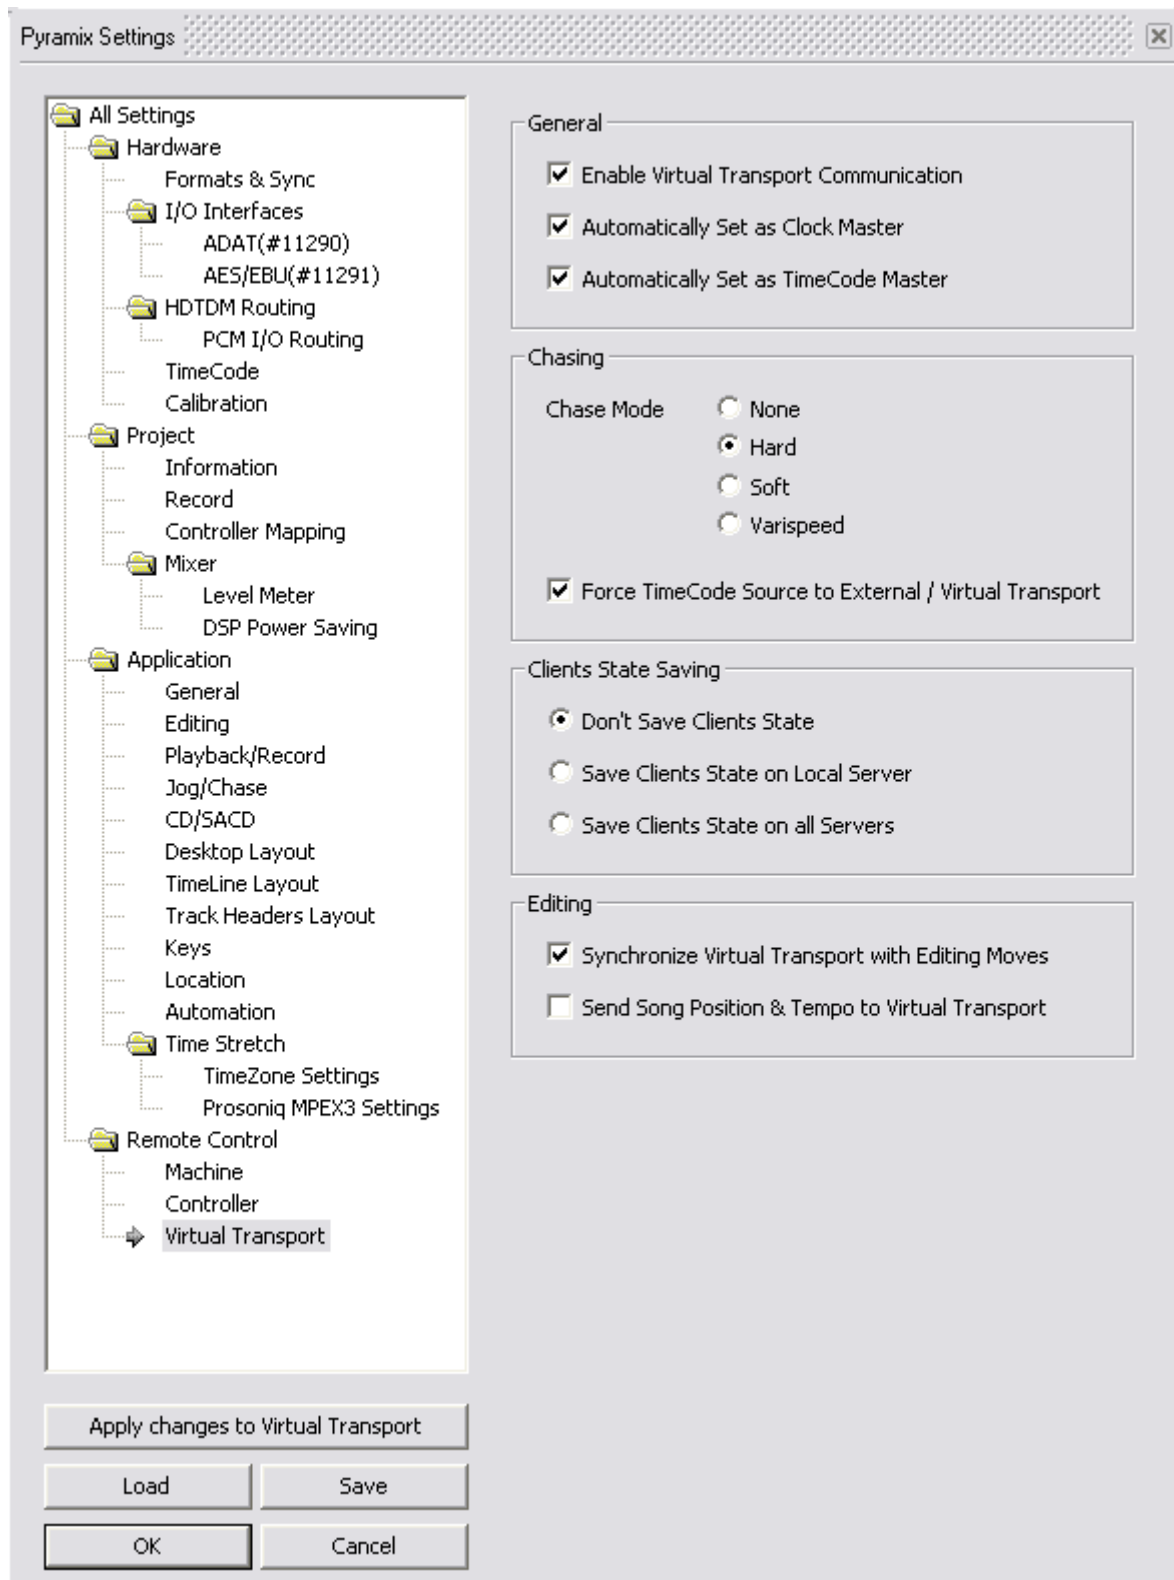

Virtual Transport page in the Pyramix All Settings menu



# ***Virtual Transport Guide : Index***



## Numerics

16/9 30

## A

Advance mode 10  
Apply New Frame Rate to File 29  
Audio Track Arming 14  
Automatically set as Clock Master 36  
Automatically set as Time Code Master 36  
AVI Splitter 30

## B

blue magnifying glass 13

## C

Capture Mode 30, 31  
Chase 14  
Clients Frame 12  
Clock Master button 13  
Controller To VT 21  
Crop Video 30

## D

Delta 13  
DS Video Player - Client 28  
DV - IEE1394 Firewire Output 28  
DV Splitter 30  
DV Video Decoder 30

## F

Filters Properties 30  
Full Screen Control Mode 30  
Full screen mode 31

## G

Generate MidiClock 27  
Generate MTC 27  
Generator Mode 33

## H

Hide Client 15

## I

ID number 13  
Instance number 13

## K

Kill Client Application 15

## L

Launcher Frame 11  
Lock button 14  
Loop 14  
Lower Field First 30

## M

Mark In green button 14  
Mark In number field 14  
Mark In red button 14  
Mark Out green 14  
Mark Out number field 14  
Mark Out red button 14  
Midi Input 27  
Midi Output 27  
Midi Sync - Client 26  
Monitor Command Filtering 23

## N

Network Configuration Preset window 18  
Network Presets 18  
Network Setup Frame 17  
Not Responding 15

## O

Offset 13  
Offset time display 13

## Q

QT Video Player - Client 34  
QT Video Player controls 34  
QuickTime™ Player 34

## R

Record On button 14  
red magnifying glass 13  
Red Offset 13

## S

Serial Port Configure 23  
Server 7  
Show Client 15  
Sony 9-Pin Sync - Client 21  
Speed number field 14  
Store Offset 14  
Synchronizer Mode 33

## T

TC Master button 13  
TC Player - Client 19  
TC Player pop-up 20





Track Arming 36

## **V**

Varispeed 10

Video Cropping Size 30

Video Render 30

VT to Machine 24

## **W**

wrench 13

